

# InMotion™ Tips and Tricks

## Top-Down/Bottom-Up and Day/Night

For more information visit [LEVOLOR.com/InMotionSupport](http://LEVOLOR.com/InMotionSupport)

### REMOTE PROGRAMMING

#### SELECT A CHANNEL

Use channel 0 to control all channels together.

1. Press the - button on the remote to select a lower channel.
2. Press the + button on the remote to select a higher channel.

#### PAIR REMOTE TO SHADE

1. Use the - and + buttons to select the channel to pair.
2. Press and hold the programming button on the motor (about 2 seconds) until the motor jogs x 1 and/or beeps x 1.
3. In the next 10 seconds, press and hold the □ stop button on the remote until the motor jogs x 2.

*NOTE: Repeat steps 1-3 to unpair remote.*

#### HIDE UNUSED CHANNELS

1. Select a channel other than 0, then press and hold the - and + buttons simultaneously until remote control displays "C" then "15", then release buttons.
2. Press the - or + buttons until the number of visible channels needed is shown (between 1 and 15).
3. Press the □ stop button to confirm selection. The screen will display "o" once to confirm selection.

*NOTE: Repeat steps 1-3 to unhide channels.*

#### DISABLE LIMIT SETTING

After all programming is complete, lock the remote to prevent accidental or unintended changes to motor direction, travel limits, and operating mode.


1. Remove cover from back of remote and locate the lock switch between the P2 buttons above batteries.
2. Move the switch to the left to lock. Remote will display "L" for lock.
3. Move the switch to the right to unlock and access all remote functions. Remote will display "U" for unlock.

#### ADD OR REMOVE ADDITIONAL REMOTE

Channels can be copied to an additional remote as an exact duplicate of the current remote programming.

1. On the current remote, select the channel to copy then press one P2 button in the battery compartment of the remote until motor jogs x 1.
2. Once more, on the current remote, press one P2 button in the battery compartment of the remote until motor jogs x 1.
3. On the new remote, select the channel to copy to then press one P2 button in the battery compartment of the remote until motor jogs x 2.

*NOTE: Repeat steps 1-3 to remove additional remote control.*

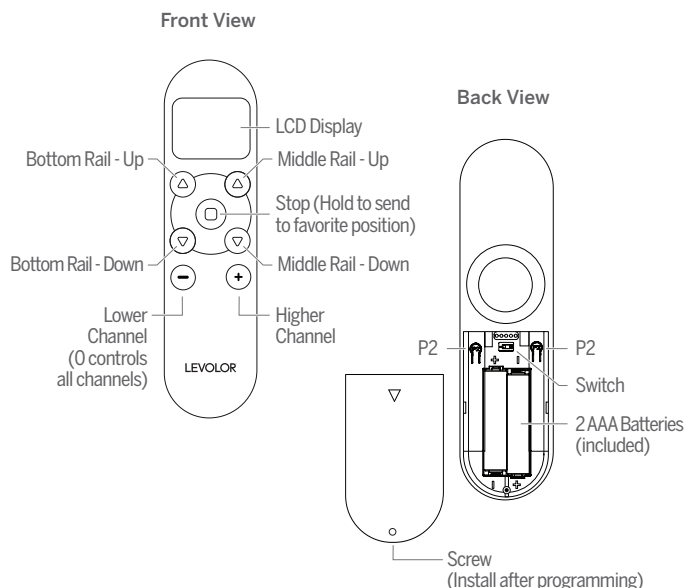

*THIS REMOTE IS FOR TOP-DOWN/BOTTOM-UP AND DAY/NIGHT SHADES ONLY.*

### FAVORITE POSITION

To send to favorite position, press and hold the □ stop button.

Favorite position is preset, but can be reset to fit your needs. To create a new favorite position, you must first delete the existing favorite position.

This procedure will set the favorite position on all shades assigned to a channel.

#### DELETE FAVORITE POSITION

1. Use the - and + buttons to select the channel to delete the favorite from.
2. Press one P2 button in the battery compartment of the remote until motor jogs x 1.
3. Press and hold the □ stop button on the remote until the motor jogs x 1.
4. Press and hold the □ stop button on the remote again, until the motor jogs x 1.

#### SET FAVORITE POSITION

1. Use the △ up and ▽ down buttons to move shade to the desired position.
2. Press one P2 button in the battery compartment of the remote until motor jogs x 1.
3. Press and hold the □ stop button on the remote until the motor jogs x 1.
4. Press and hold the □ stop button on the remote again, until the motor jogs x 2

# InMotion™ Tips and Tricks - Continued

## Top-Down/Bottom-Up and Day/Night

For more information visit [LEVOLOR.com/InMotionSupport](http://LEVOLOR.com/InMotionSupport)

### OPERATING MODE

*This procedure will set the operating mode on all shades assigned to a specific channel.*

*All shade motors can be set to two different operating modes.*

#### CONTINUOUS MODE (DEFAULT SETTING)

*Recommended for cellular shades.*

*Motor continues to move after a short press of the  $\triangle$  up or  $\nabla$  down arrow buttons until the  $\square$  stop button is pressed or until the limit is reached.*

1. Press and hold (about 5 seconds) the left  $\triangle$  up and  $\nabla$  down buttons simultaneously until the motor jogs x 1.
2. Press and hold (about 2 seconds) the  $\square$  stop button until the motor jogs x 2.

#### INTERMITTENT MODE

*Motor moves a small amount after a short press of the  $\triangle$  up or  $\nabla$  down buttons and continues to move after a long press of the  $\triangle$  up or  $\nabla$  down buttons until the  $\square$  stop button is pressed or the limit is reached.*

1. Press and hold (about 5 seconds) the left  $\triangle$  up and  $\nabla$  down buttons simultaneously until the motor jogs x 1.
2. Press and hold (about 2 seconds) the  $\square$  stop button until the motor jogs x 1.

### MOTOR SPEED

*This procedure will set the motor speed on all shades assigned to a channel.*

*All motors have 3 speeds available and are set to the slowest speed by default.*

#### SET TO FASTER SPEED

1. Press one P2 button in the battery compartment of the remote until motor jogs x 1.
2. Press the left  $\triangle$  up button. Motor jogs x 1.
3. Press the left  $\triangle$  up button again. Motor jogs x 2.

#### SET TO SLOWER SPEED

1. Press one P2 button in the battery compartment of the remote until motor jogs x 1.
2. Press the left  $\nabla$  down button. Motor jogs x 1.
3. Press the left  $\nabla$  down button again. Motor jogs x 2.

*NOTE: If the motor has no response, it is already on the fastest or slowest speed.*

### MOTOR OVERVIEW

During programming, shades will jog by moving slightly down and up.

Certain programming functions will affect all shades on the selected channel such as – favorite position, travel limits, operating mode, and motor speed. To program individual shades: pair the shade to its own channel or put all other shades into sleep mode.

*To sleep Shades: Press and hold programming button for 6 seconds until the motor jogs x 2. Wake shade by pressing the programming button for less than 1 second.*

### TRAVEL LIMITS

*This procedure will adjust the travel limits on all shades assigned to a channel.*

*Upper and lower travel limits are set at the factory during production to your order specification. Upon installation, adjustment of these limits may be necessary to better suit your needs.*

*Take care when adjusting limits to avoid damage to product.*

*NOTE: If you exit programming before you finish adjusting the travel limits, the motor will take the previous limits.*

#### ADJUST THE UPPER LIMIT

1. Use the - and + buttons to select the appropriate channel.
2. Press and hold the left  $\triangle$  up and  $\square$  stop buttons simultaneously for about 5 seconds until the motor jogs x 1.
3. Use the right  $\triangle$  up and  $\nabla$  down buttons to raise the middle rail to the desired highest position.
4. Use the left  $\triangle$  up and  $\nabla$  down buttons to move the bottom rail to the desired highest position.
5. Press and hold the left  $\triangle$  up and  $\square$  stop buttons simultaneously for about 5 seconds until the motor jogs x 2.

#### ADJUST THE LOWER LIMIT

1. Use the - and + buttons to select the appropriate channel.
2. Press and hold the left  $\nabla$  down and  $\square$  stop buttons simultaneously for about 5 seconds until the motor jogs x 1.
3. Use the left  $\triangle$  up and  $\nabla$  down buttons to lower the bottom rail to the desired lowest position.
4. Use the right  $\triangle$  up and  $\nabla$  down buttons to move the middle rail to the desired lowest position.
5. Press and hold the left  $\nabla$  down and  $\square$  stop buttons simultaneously for about 5 seconds until the motor jogs x 2.