



How to Install Arches

Follow the Steps Below for Outside Mounted Arches (OM)

Step 1. Place arch over window opening being sure it is centered and the bottom is at the correct location.

Step 2. Insert screw (#6 sheetrock) at top of arch, into pre-drilled mounting hole making sure not to over tighten.

Step 3. Place a level at the bottom of the arch and ensure that it is properly aligned.

Step 4. Insert remaining screws (supplied).


Step 5. Place button caps (supplied) over screw holes and push in as far as possible by hand. Use a small hammer to lightly tap in the rest of the way being careful not to damage the button cap. For Custom colors use supplied touch up paint for cap color.

Step 6. Use a mild window cleaner to remove any fingerprints or dirt. Do not spray directly onto arch or rub hard as this could damage the paint.

For Inside Mounted Arches (IM) see website “How To” Install inside mounting strips



Installation Package

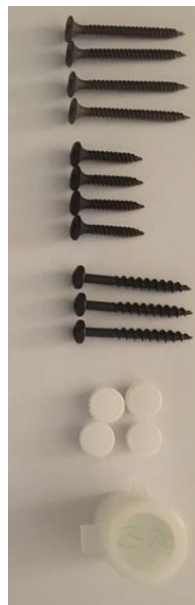

1 1/2" lg. Sheetrock Screws for Mounting Arch to Sheetrock

1" lg. Sheetrock Screws for Mounting Arch to Mounting strip

1 1/2" lg. Flat Head Screws for Mounting Strip

Screw Caps to cover Mounting Screws



Touch up Paint for Custom Colors(to paint screw caps)

Inside Installation Package




Inside Mounting Strips

*All mounting strips are cut to dimensions provided. American Arches will deduct 1/8" from all sides of **arch** to insure proper fit. Any alterations should be made to the mounting strip, **not** to the arch for proper fit. Mounting strip over **59"** will be shipped in 2 pieces.

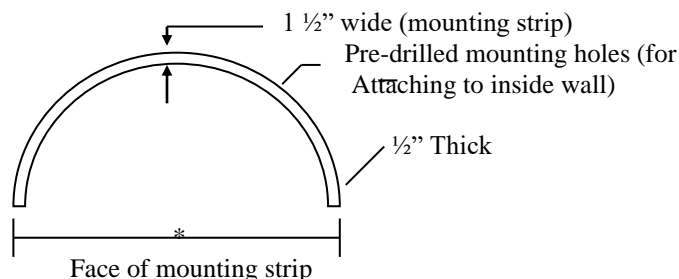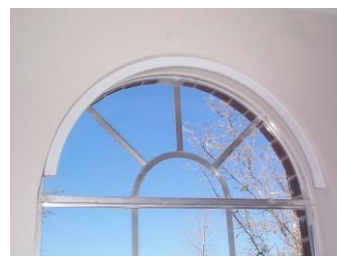

All mounting strips are at an additional cost per arch (all sizes included) and are required for all inside mounted arches.

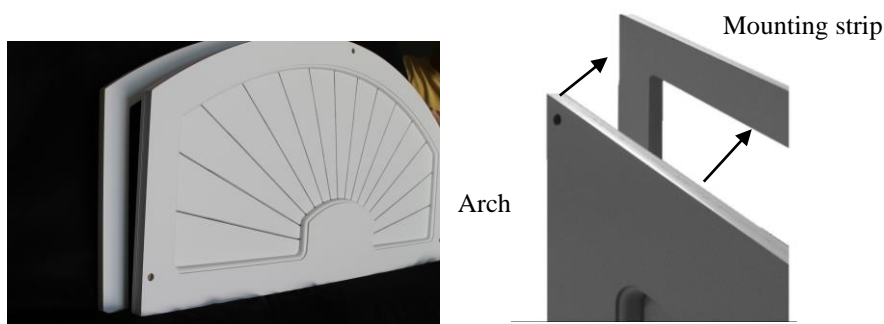

Installation Instructions for Inside Mounting Strips

This product was developed by American arches, for the purpose of easy inside mounting of arches without the use of brackets. Please read the following suggestions carefully.

Step 1. Determine the inside depth (the location from the face of the sheetrock to the back of the arch) at which the arch is to be located in relationship to the face of the blind or shutter. Mark this dimension lightly with a pencil to the inside arch opening in several places.

Step 2. Place the mounting strip inside the arch opening with the face (front) located at the pencil markings. While holding the strip in place insert the 1 1/2" lg. Flat Head sheetrock screws (provided) into the predrilled mounting holes and tighten hand tight.

Step 3. If light gaps still exist around outer edge, caulk is required.

Step 4. Place your American arch onto the face of the mounting strip and install the upper small screws (provided) after proper height is determined.

Step 5. Level the arch with the top of the window treatment and insert the remaining small mounting screws (provided) to the mounting strip being careful not to over tighten.

Step 6. Lightly tap in the provided button caps over the mounting holes. In some cases you can cut off one of the three tabs on the backside of the button caps for easier installation.

Step 7. Clean any remaining handprints from the arch with a soft cloth and mild dish soap being careful not to damage the paint.

For Mounting Hardware see "How to" How to install American Arches